


Basecam Bluetooth BLE module connection

Option1: put on the UART pin header

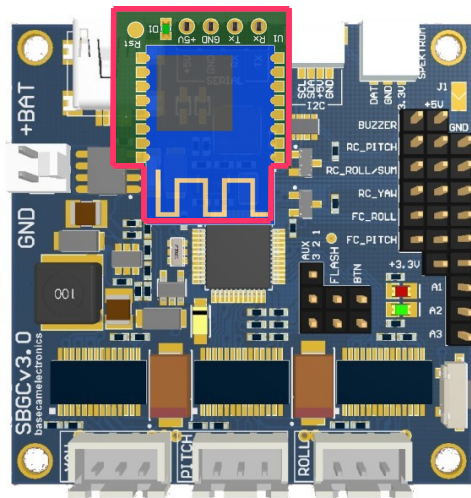

Option2: connect by cable to the UART or RC_SERIAL port

